



## Screenless Granulator SG-L

SG-L27



Refer carefully to this manual before operation.

# SG-L Series

## ■ Coding Principle

SG - L xx - x


- Options
- Length of Cutting Chamber (CM)
- Low speed
- Shini Granulator



Cutting chamber

## ■ Features

- Adopt TECO brand gear motor that features stable performance, long service life and large torque.
- Break large spurs into smaller pieces, and teeth cutter bites the materials into the desired size with less dust and ready to be reused with virgin materials.
- The front and rear fixed cutter and staggered blade are in double-edged design, and the cutter or blade can be capsized if one side is blunt to service life.
- Screenless screen, even particle granules with little dust content.
- Compact design, small footprint for fast cleaning and maintenance.
- Feed box with visual window, and double-layer sound proof are made of stainless steel.
- Gear motor is connected with the main shaft with the coupling, making it easy to replace cutters and gear motor.

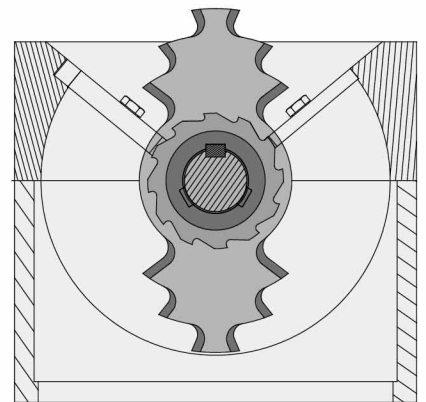

Teeth cutter diagram


## ■ Application

SG-L Screenless Granulator is applicable to granulating hard long or strong flexible sprues for instant recycling and a few rejects. It features small size, low speed and wear, and super silence, with low speed structure, and particle granules of little dust. Quick and easy cleaning method to clean residues from the cutting chamber in just a few simple steps. Simple control mode and operability is user-friendly that makes it easy to operate. Besides, multiple options are available to meet different production processes and specific demands.

## ■ Options


- Manual collection bin

The manual collection bin is convenient for regrind recycling and storing.

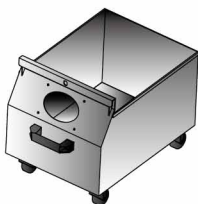


- Regrind Conveying Via Blower & Cyclone (PC type)


This device utilizes loading blower to convey regrind into the cyclone dust collector to separate the regrind from the air and then the regrind will fall into the material storage hopper.

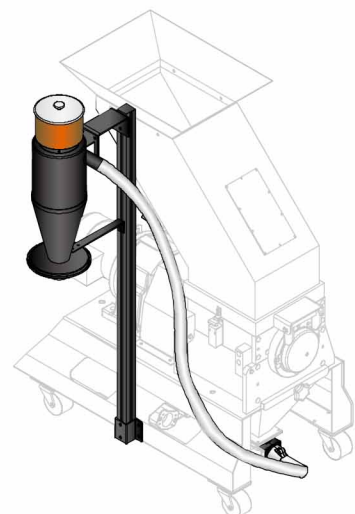


- On the basis of standard cutter 5mm, cutter 4mm or 6mm is provided for option.

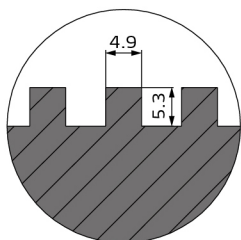

5mm

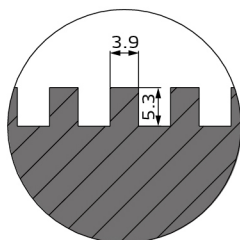

4mm

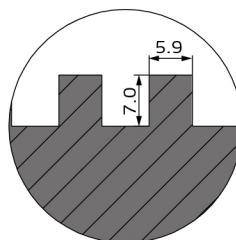


6mm

- The discharge port cover is available for the feed box. When the machine doesn't work, cover the discharge port can reduce the material contamination caused by dust or other sundries dropped into the cutting chamber after machine shutdown, and add "DPC" at the end of the model code.




- Control box with intermittent running function

The continuous or intermittent mode of the blade shaft can be selected as per the demand, and the intermittent running mode is suitable for granulating plastic nozzles with lots of dust or large electrostatic. Add "ICB" at the end of the model code.

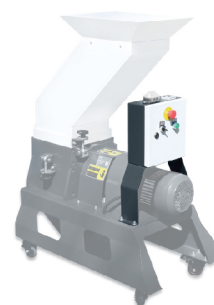

## ● 30-Sec Instant Recycling System- VR Type

The 30-sec. instant recycling system utilizes the high-pressure blower to blow the regrinds in the material storage tank to the proportional mixer and reuse the regrinds after mixing, so that the sprues will not have physical properties and color changes due to oxidation and humidification, thus improving the products quality.

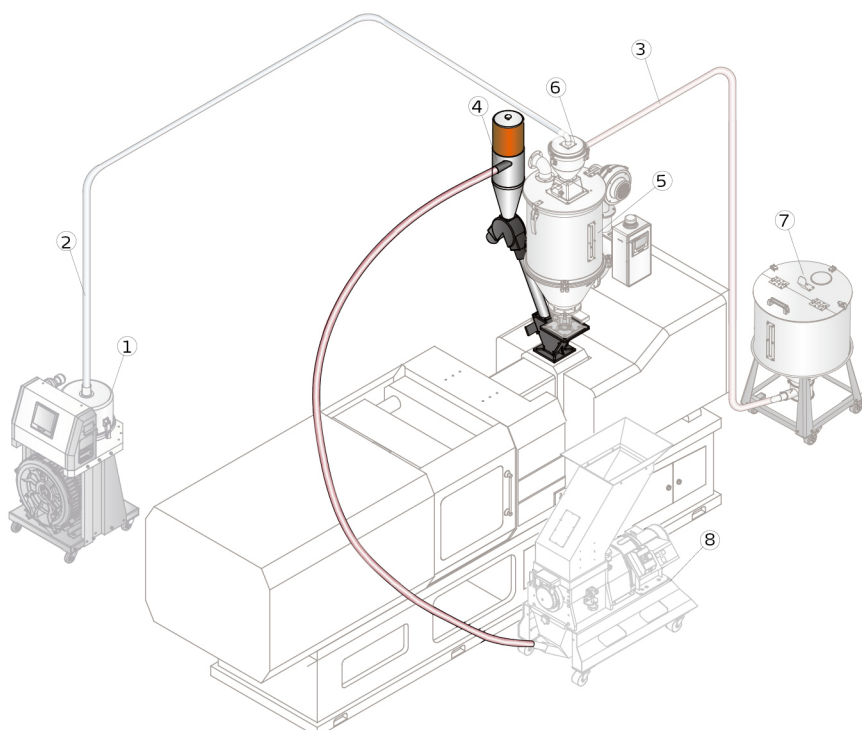


1. Vacuum Loader
2. Suction pipe
3. Material pipe
4. 30-Sec Instant Recycling System- VR Type
5. Dryer
6. Vacuum hopper receiver
7. Material storage tank
8. Screenless Granulator


# SG-L Series

## ● 30-Sec Instant Recycling System- PR Type

The 30-sec. instant recycling system utilizes the high-pressure blower to blow the regrinds in the material storage tank to the proportional mixer and reuse the regrinds after mixing, so that the sprues will not have physical properties and color changes due to oxidation and humidification, thus improving the products quality.

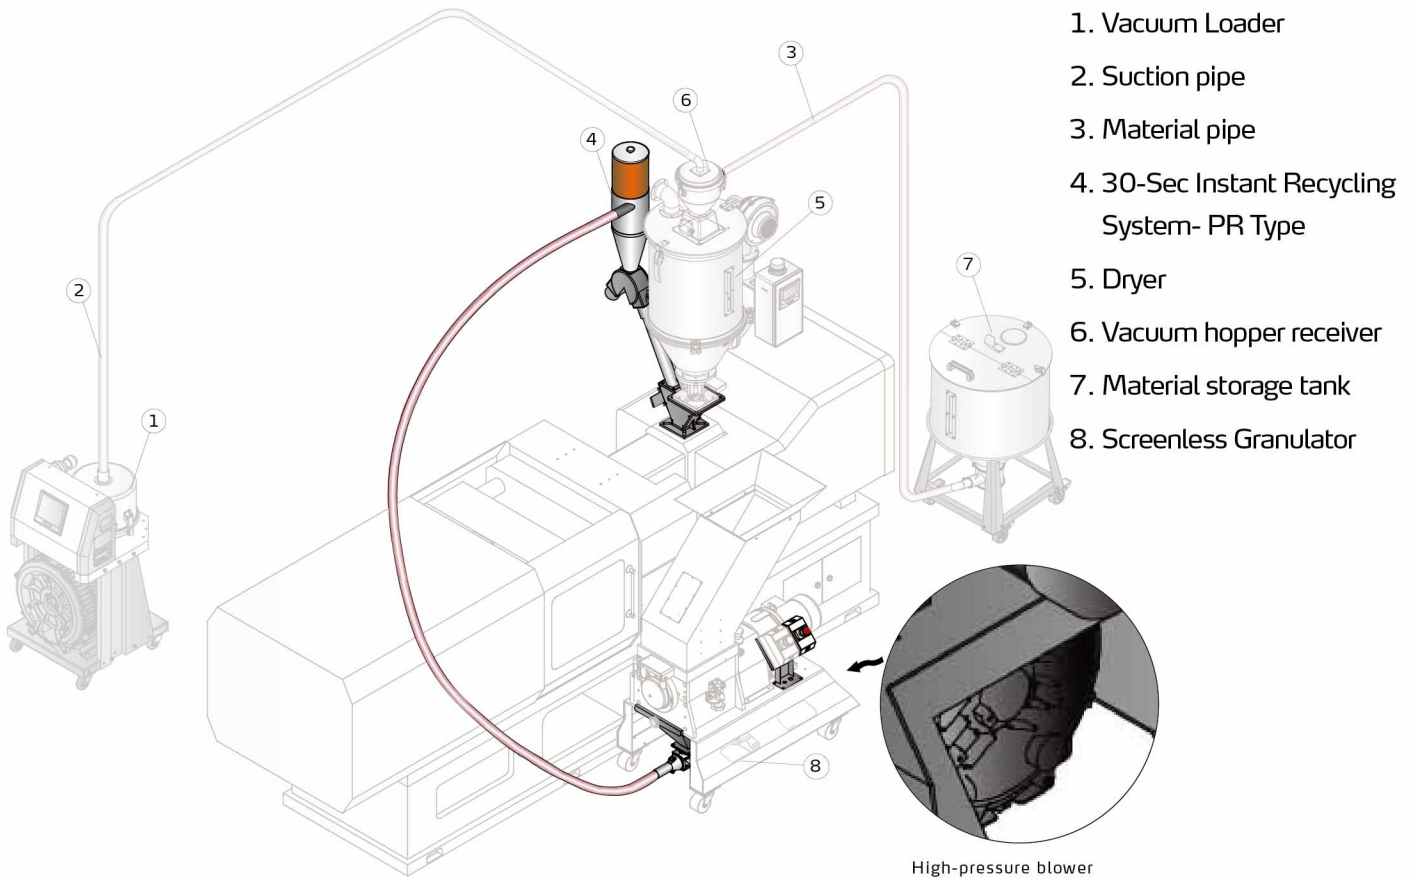

## ■ Outline Drawings

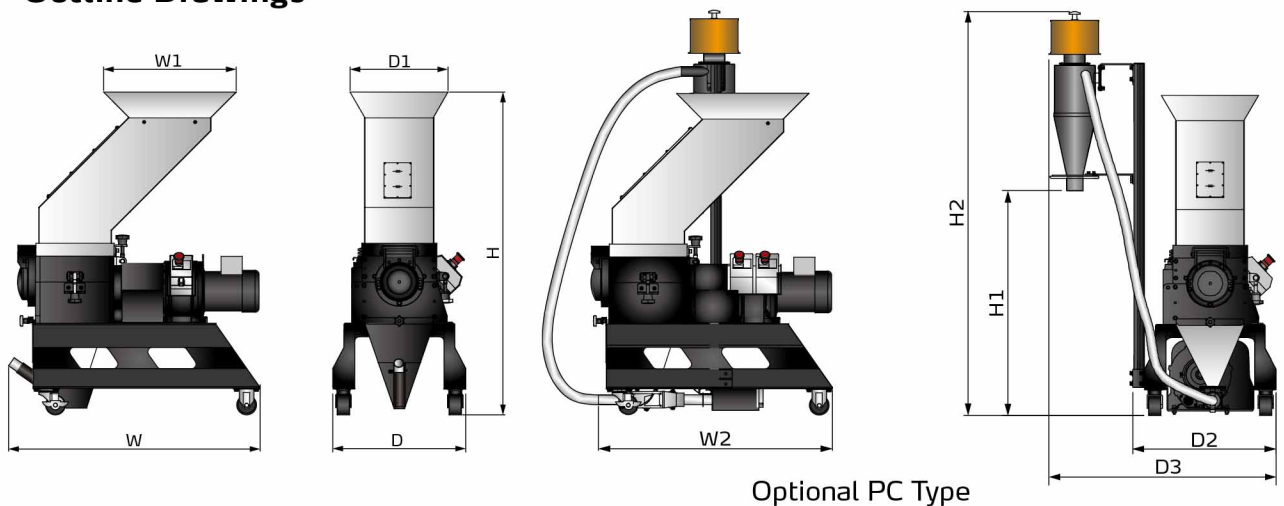

## Specifications

Model		SG-L17	SG-L27	SG-L32	SG-L43
Motor Power (kW, 50/60Hz)		1.1/1.3	1.5/1.75	1.5/1.75	2.2/2.57
Rotating Speed (rpm, 50/60Hz)		27/33	27/33	27/33	27/33
Capacity of optional storage tank (L)		23	30	39	48
Material of Teeth Cutters		Cr12MoV	Cr12MoV	Cr12MoV	Cr12MoV
Number of Staggered Blades		1	2	2	3
Number of Teeth Cutters		2	3	3	4
Cutting Chamber (mm)		240 x 175	240 x 270	300 x 320	300 x 430
Max. Throughput Capacity (kg/hr)		8	12	16	20
Noise Level dB(A)		80~85	80~85	80~85	80~85
Motor Power (KW)		0.55	0.55	0.55	0.55
Dimensions	H (mm)	1340	1340	1355	1355
	H1(mm)	875	875	800	800
	H2(mm)	1075	1075	1500	1500
	W (mm)	920	1015	1076	1188
	W1 (mm)	400	496	503	607
	W2(mm)	855	950	1040	1151
	D (mm)	516	516	566	566
	D1(mm)	363	363	412	408
	D2(mm)	560	560	610	610
	D3(mm)	890	890	940	940
	Weight(kg)	160	200	240	345

- Note: 1) "\*"Stand for Option  
 2) Max. Capacity of the machine is subject to the size and composition of the material.  
 3) Noise level varies according to different granules.  
 4) To avoid plastic from sticking to the blades, all materials should be crushed at normal temperature.  
 5) Power supply: 3Φ, 230/400/460/575VAC, 50/60Hz.

## Shini Group

Addr: No. 23, Minhe St., Shulin Dist.,  
New Taipei, Taiwan

Tel: +886 2 2680 9119

Fax: +886 2 2680 9229

Email: [shini@shini.com](mailto:shini@shini.com)

### Factories:

- Taiwan
- Dongguan
- Pinghu
- Ningbo
- Chongqing
- Pune

2024-05-15-04 Copyrights Reserved.

[www.shini.com](http://www.shini.com)